

Build your own **Ford** GT

15



Build your own **Ford GT**

DEAGOSTINI
MODELSPACE™
www.model-space.com

STAGE

PAGE

61	Transmission case right	236
62	The transmission case	239
63	Engine sound test	243
64	The right rear wheel	246
65	The right rear tyre	249



Ford Motor Company
trademarks and trade
dress used under license
to ehk China Company Ltd.



Gulf trademarks under license
from Gulf Oil International Ltd.

Published in the UK by De Agostini UK Ltd, Royds Withy King, 65 Carter Lane, London EC4V 5EQ.
Published in the USA by De Agostini Publishing USA, Inc., 299 Park Avenue • New York, New York 10171.
All rights reserved © 2021

Warning: Not suitable for children under the age of 14.

This product is not a toy and is not designed or intended for use in play.
Items may vary from those shown.


Stage 61: Transmission case right




YOUR PARTS

61-A Transmission case right

 61-B FP01 2.3 x 4mm screws

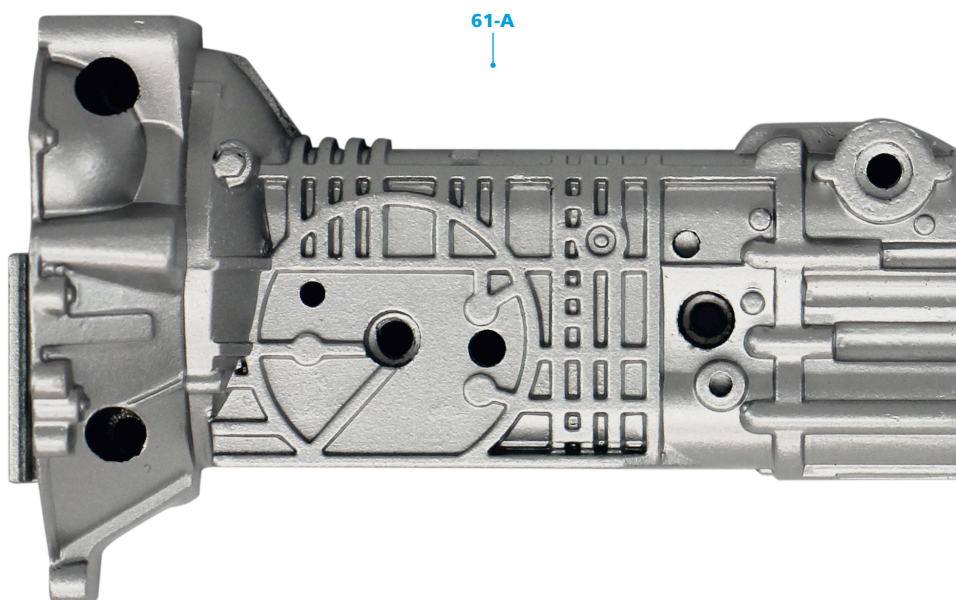


 STEP 61-1
Prepare Rotoflex
coupling right.

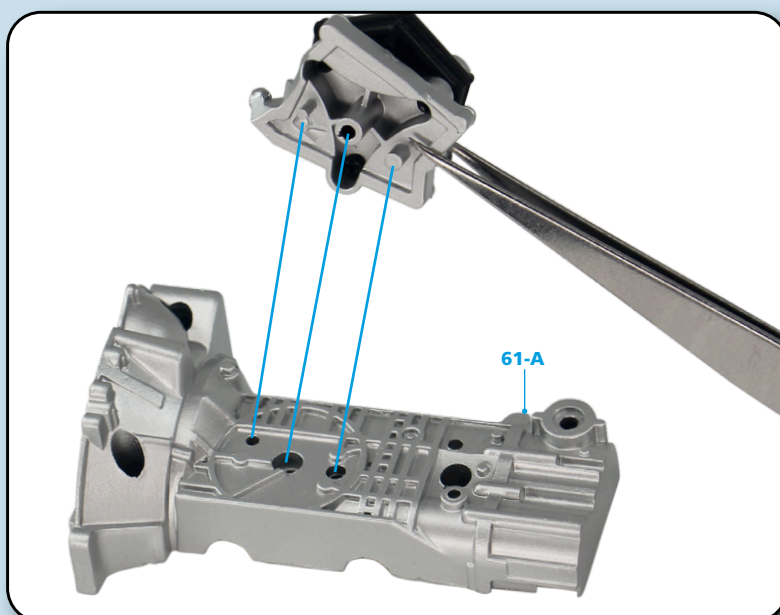


STEP 61-2
Align the three posts of
the Rotoflex coupling into
the corresponding holes in
the transmission case left
(61A). The parts can only fit
together in one orientation.

 STEP 61-3
Push the Rotoflex
coupling into place.

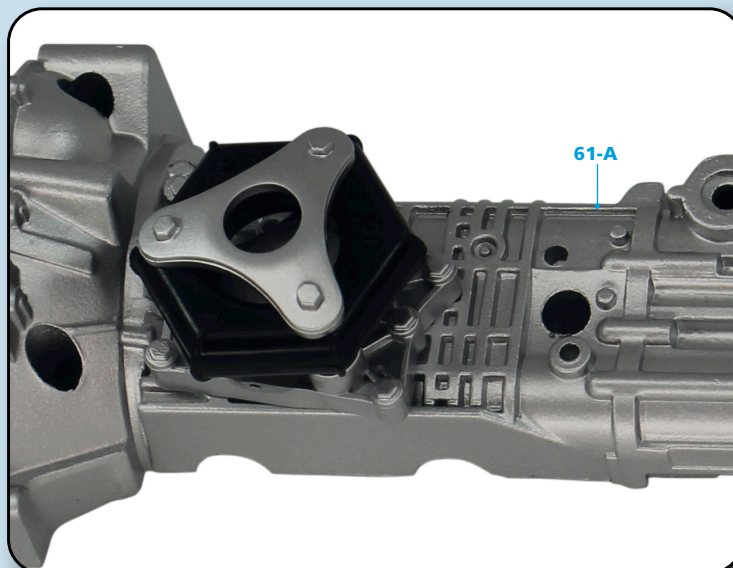


STEP 61-4

 Turn the transmission case over and secure the coupling with an FP01 screw.

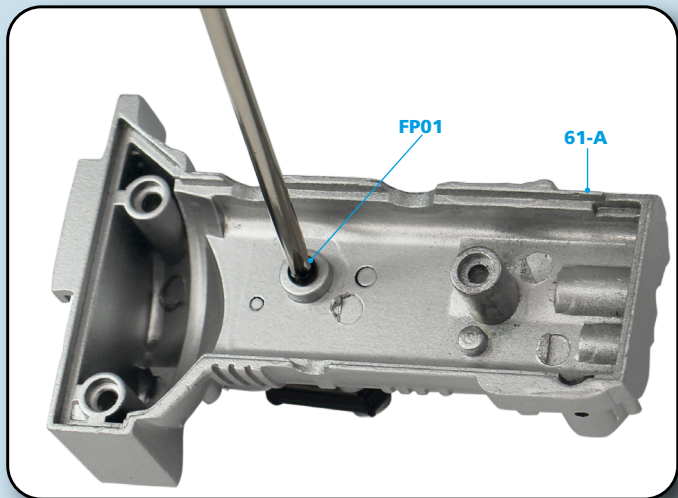

STAGE COMPLETE

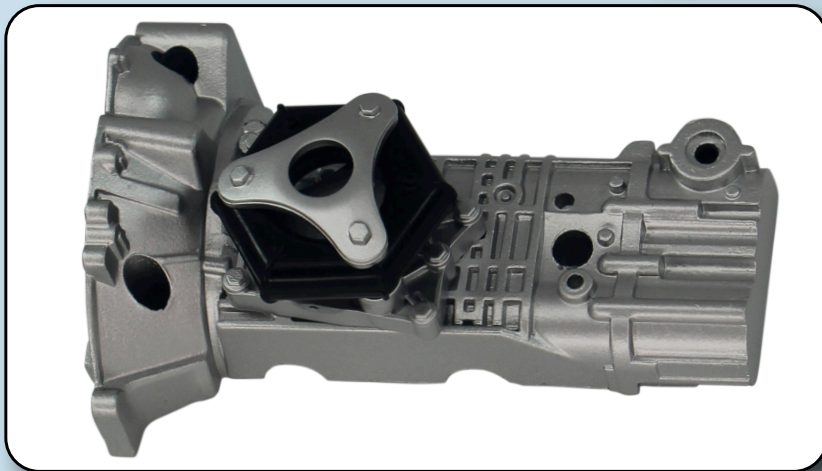 

Stage 62: The transmission case



YOUR PARTS

 
 
 
62-A Transmission case upper cover

62-B Transmission case rear cover

62-C Transmission case control lever



62-D FP01 2.3 x 4mm screws

62-E FD01 2.3 x 4mm screws

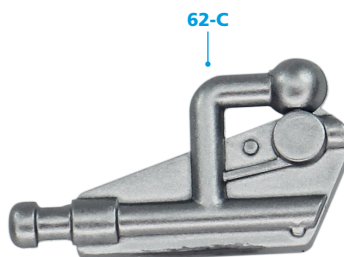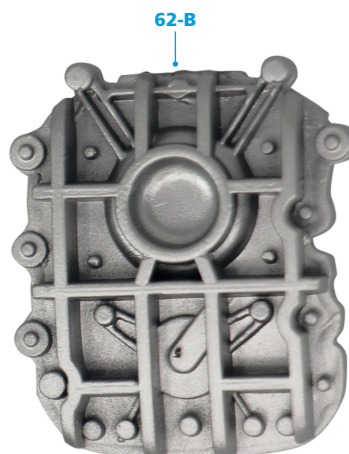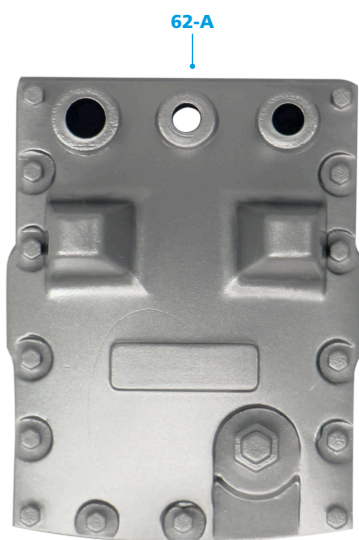

STEP 62-1

  Place the transmission case control lever (62C) into the corresponding points in the transmission case right. It can only fit in one orientation. Secure the two parts from inside the case with an FP01 screw.

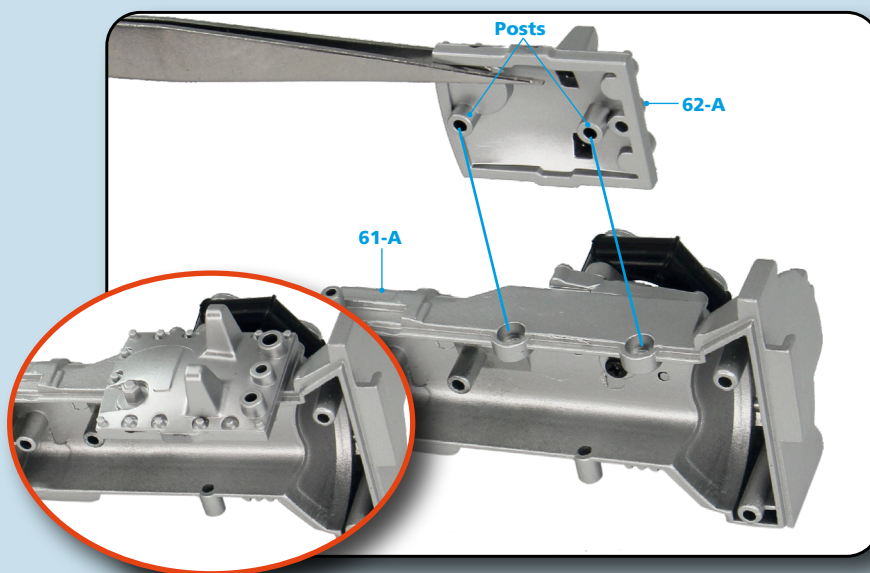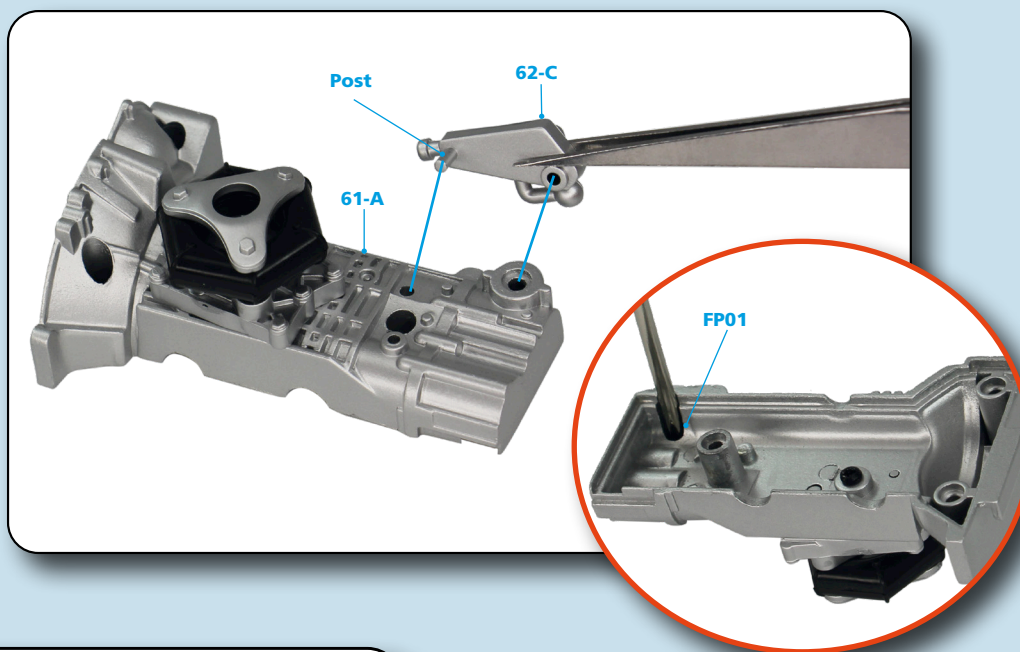


STEP 62-2

Insert the posts on the underside of the transmission case upper cover (62A) into the corresponding holes in the top of the case.



STEP 62-3

 Secure the cover from inside the case with two FP01 screws.

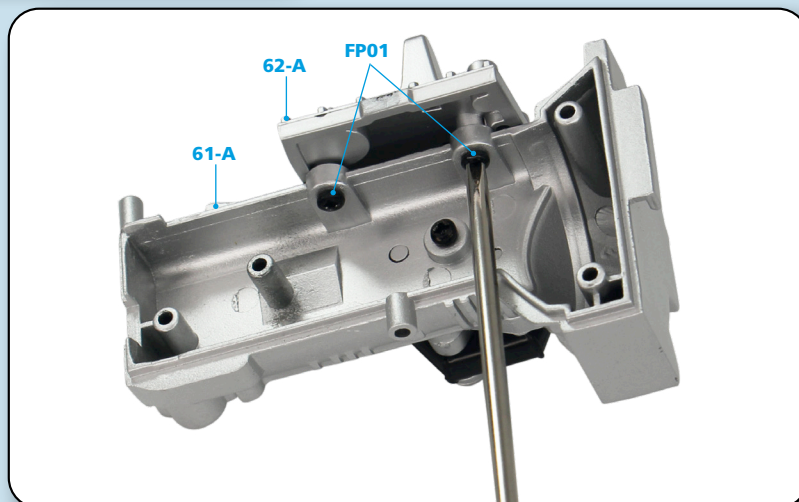

STEP 62-4

  
Place the tab of the transmission case rear cover (62B) in the notch at the rear of the case, aligning the hole in it with the hole in the post. Fix in place with an FP01 screw.

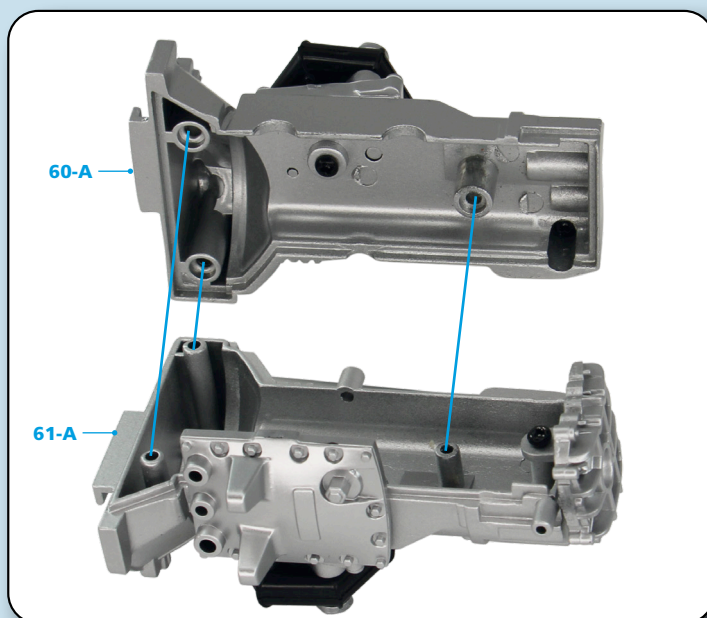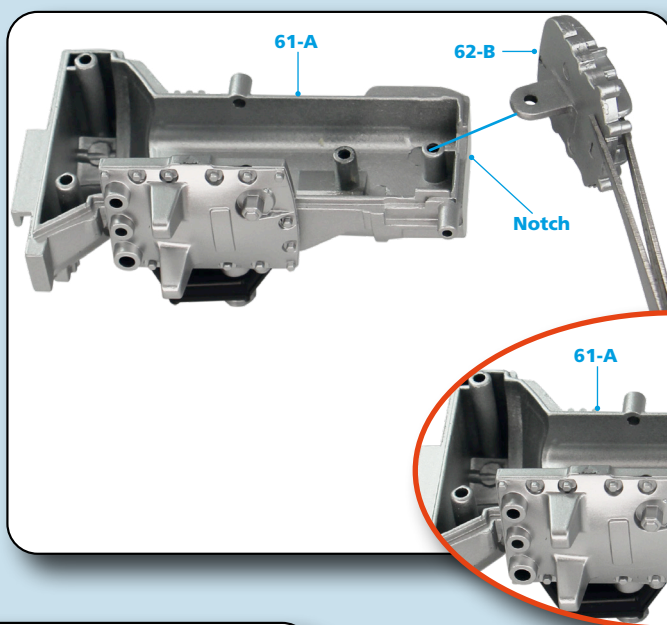

STEP 62-5



Align the corresponding posts of the two halves of the transmission case.

 STEP 62-6
Carefully press the two parts together, as shown.

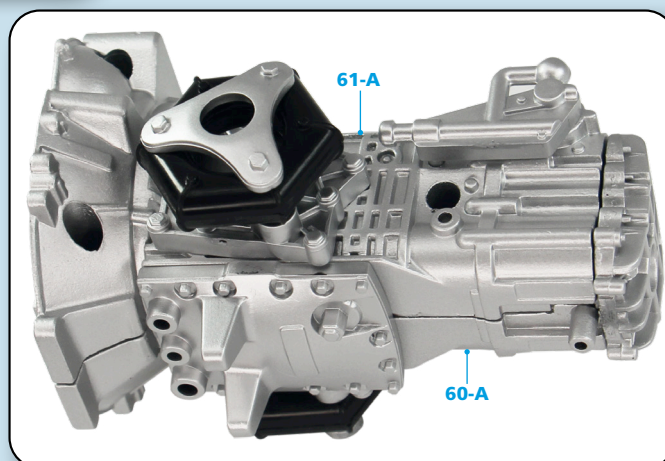

STEP 62-7

  Secure the two halves of the transmission case together with an FP01 screw in each of the three holes in the left half.

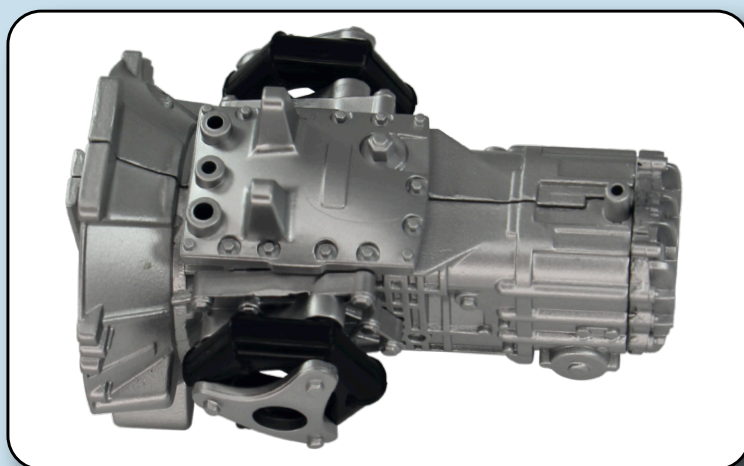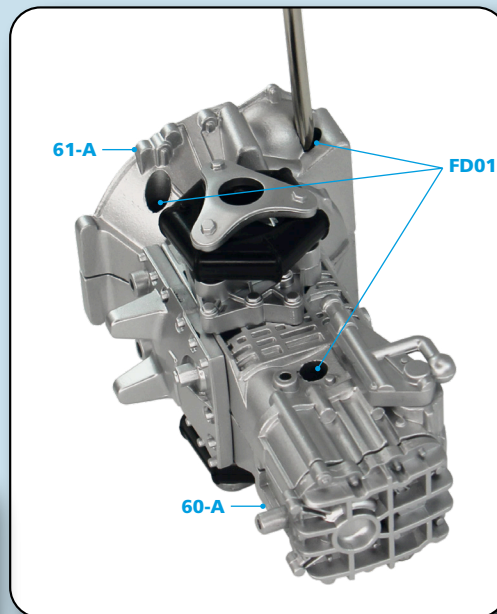

STAGE COMPLETE



Stage 63: ***Engine sound test***



YOUR PARTS

63-A Wheel outer

63-B Wheel wing nut

63-A



63-B



STEP 63-1

Put the wheel outer (63A) and wing nut (63B) to one side for later use.



 
STEP 63-2

 
Prepare three LR44 batteries.



STEP 63-3

Remove the battery case cover and locate the + and - symbols inside the case.

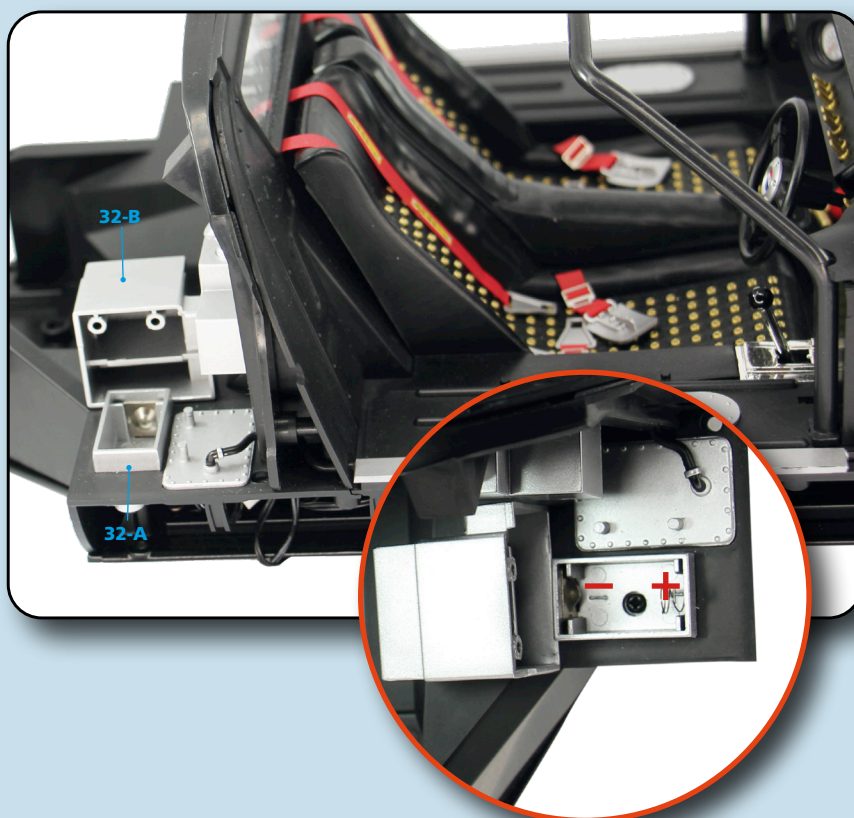

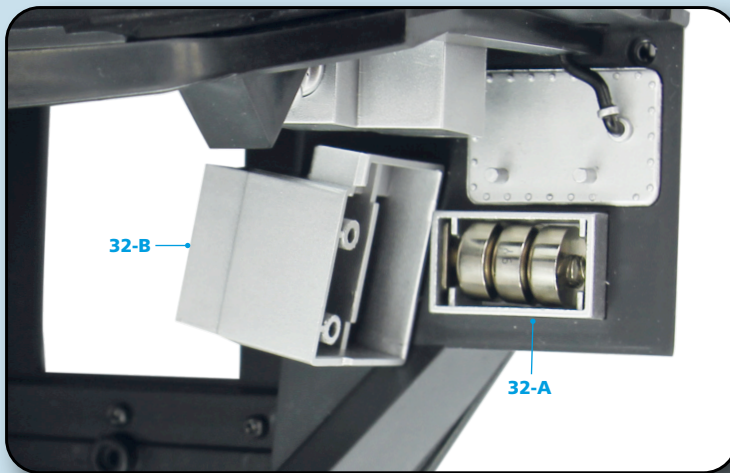


STEP 63-4

Insert the three LR44 batteries into the case. Place the cover back over the case.

STEP 63-5

 To test the engine sound, simply press the accelerator pedal. Remove the batteries from the box and replace the cover.

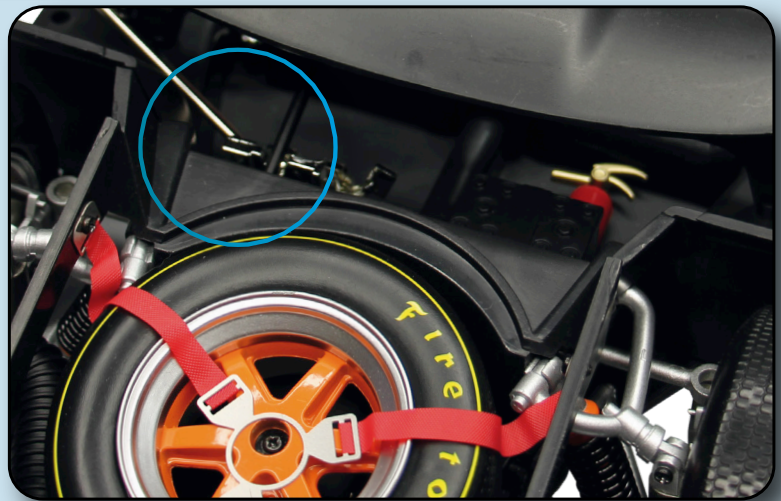

STAGE COMPLETE



Stage 64: ***The right rear wheel***



YOUR PARTS

64-A Wheel inner
64-B Wheel centre

64-A



64-B



 
STEP 64-1

Prepare the wheel outer (63A) from the previous stage.




STEP 64-2

Align the holes of the wheel centre (64B) with the pins in the wheel outer (63A).

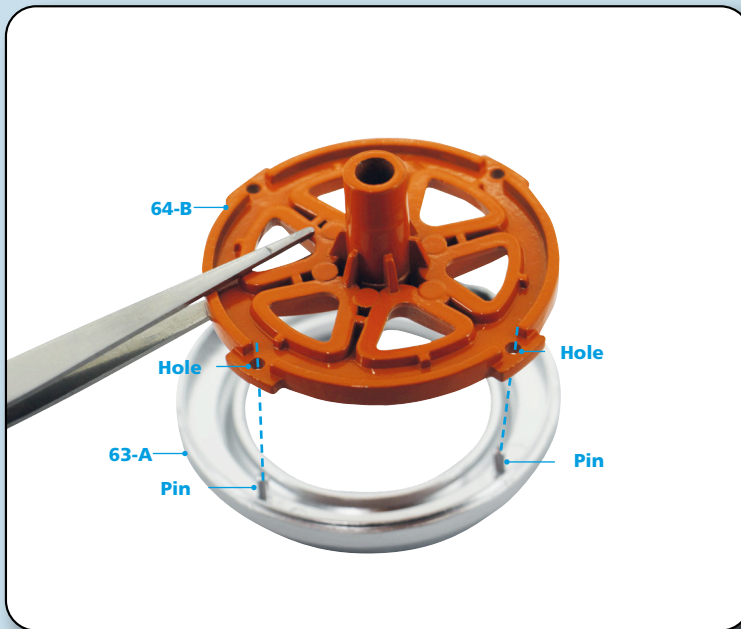


STEP 64-3

 Place the centre into position in the outer, as shown.

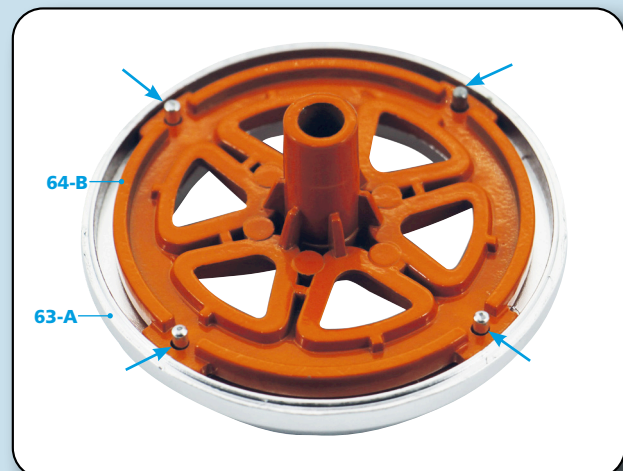


STEP 64-4

 Place the wheel inner (64A) onto the pins of the wheel outer.

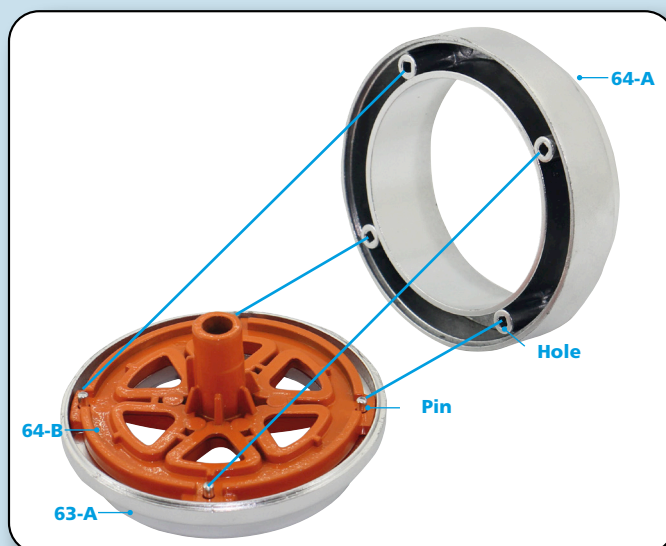

STAGE COMPLETE

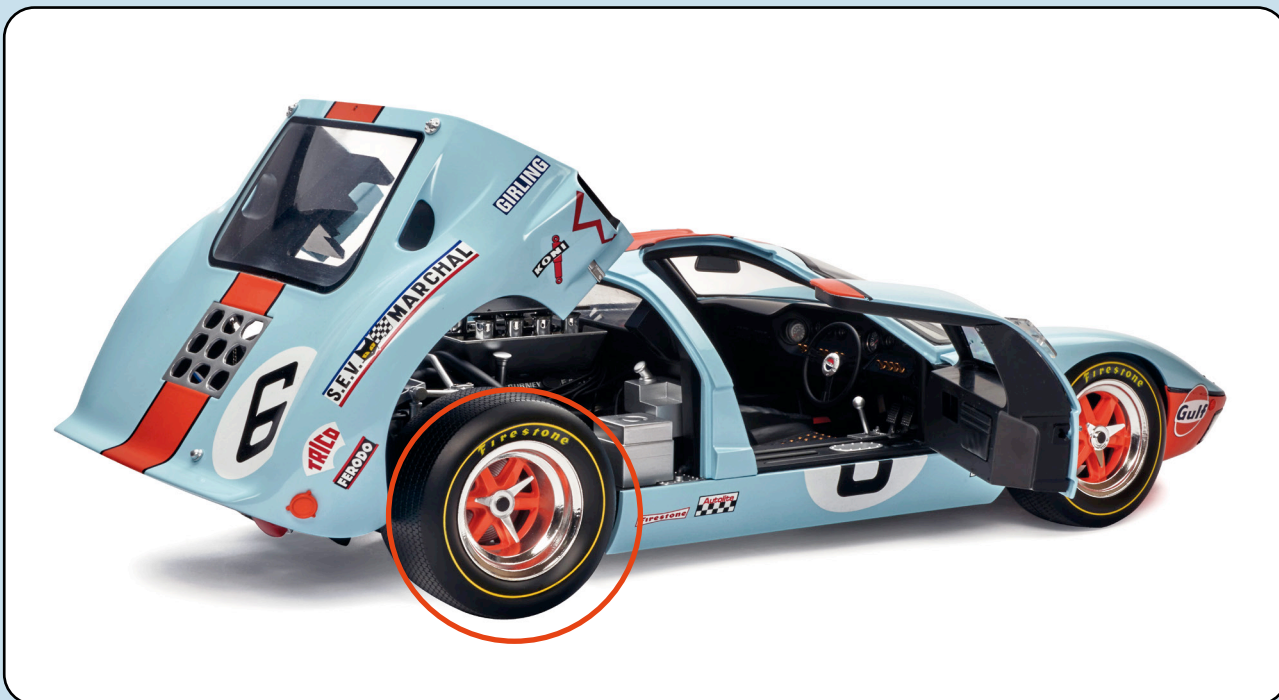 

Stage 65: The right rear tyre



YOUR PARTS

65-A Right rear tyre

65-A



STEP 65-1

Collect the right rear wheel assembly from the previous stage.

**STEP 65-2**

Fill a container large enough to hold the right rear tyre (65A) with hot water. Immerse the tyre in the water for a few minutes until it becomes soft.

STEP 65-3

Once the tyre is pliable, place the wheel inside it.



STAGE COMPLETE

