

Build your own **Ford GT**

8



Build your own Ford GT

DEAGOSTINI
MODELSPACE™
www.model-space.com

STAGE

PAGE

26	Instrument panel top	104
27	Gear lever and air vents	107
28	Pedals	111
29	Steering wheel and column	115
30	Steering rack	119



Ford Motor Company
trademarks and trade
dress used under license
to ehk China Company Ltd.



Gulf trademarks under license
from Gulf Oil International Ltd.

Published in the UK by De Agostini UK Ltd, Royds Withy King, 65 Carter Lane, London EC4V 5EQ.
Published in the USA by De Agostini Publishing USA, Inc., 299 Park Avenue • New York, New York 10171.
All rights reserved © 2020

Warning: Not suitable for children under the age of 14.

This product is not a toy and is not designed or intended for use in play.
Items may vary from those shown.

Stage 26: instrument panel top



YOUR PARTS

26-A Instrument panel top

26-B FP01 screw 2.3 x 4mm




STEP 26-1

Retrieve the instrument panel assembled in the previous stage.



STEP 26-2

Place the holes of the instrument panel top (26A) onto the posts on the inside of the instrument panel.

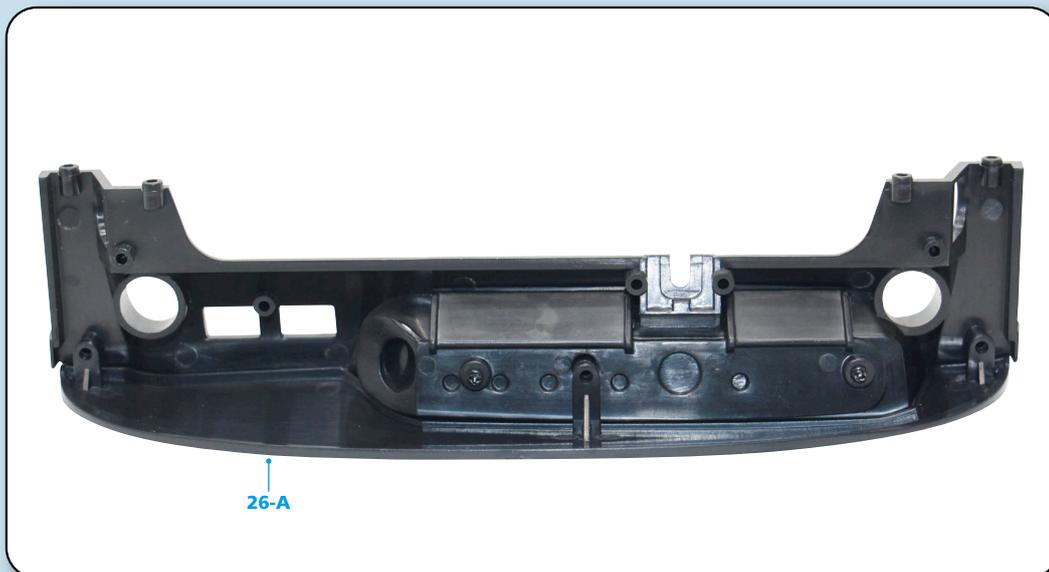

STEP 26-3

Press the panel top into place.

STEP 26-4

Secure the two parts together with three FP01 screws.



STAGE COMPLETE




Stage 27: Gear lever and air vents



YOUR PARTS

- 27-A Left air vent
- 27-B Right air vent
- 27-C Gear lever
- 27-D Gear lever plate
- 27-E FP02 screw 1.8 x 4mm
- 27-F FP01 screw 2.3 x 4mm

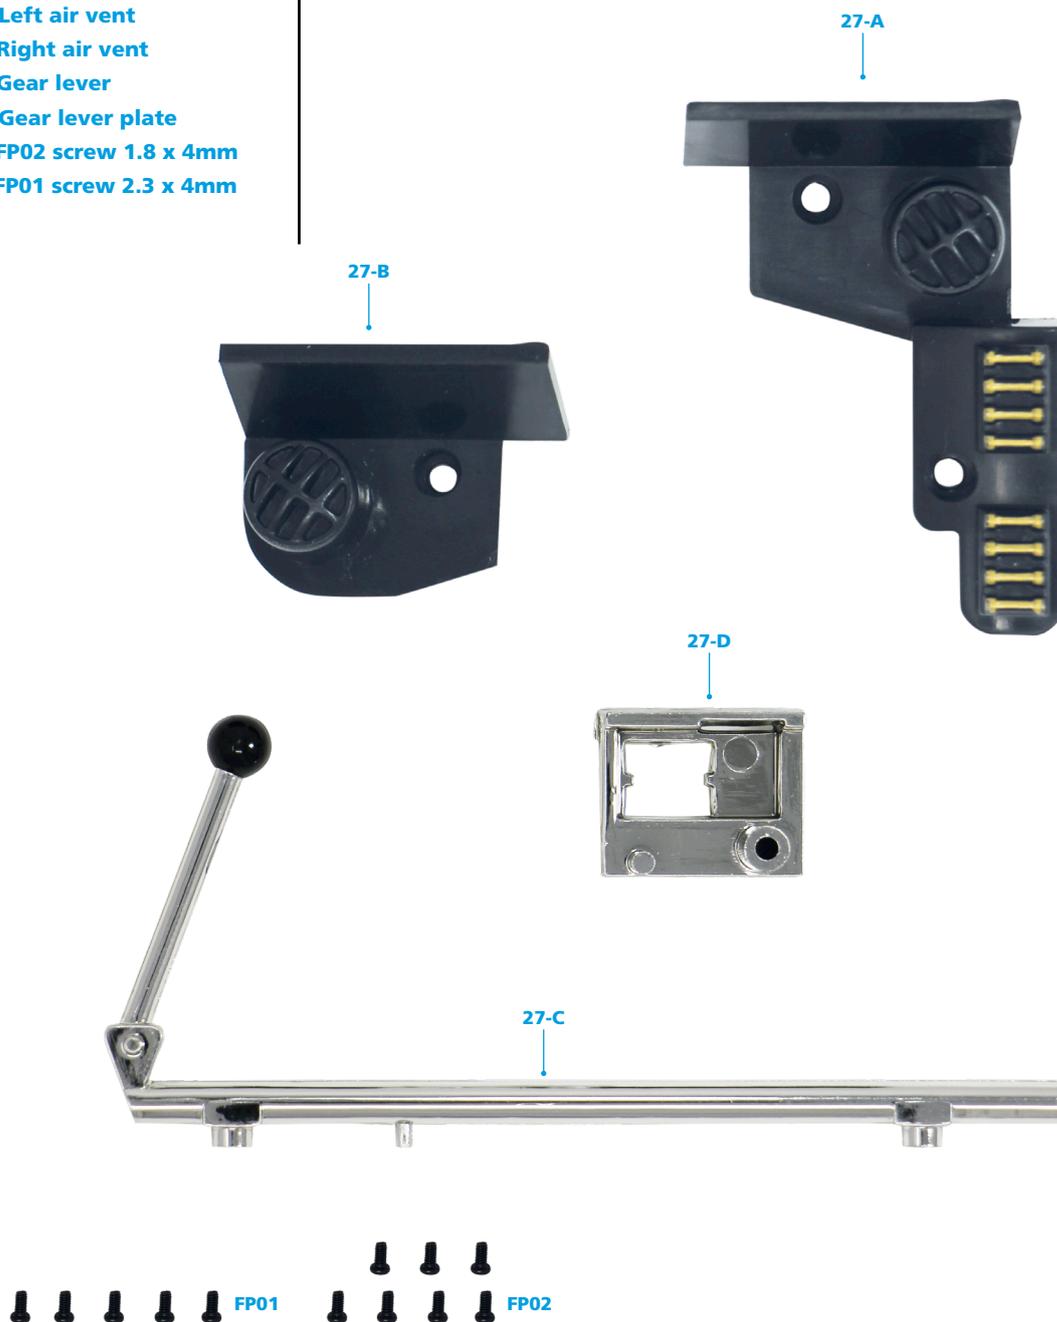

STEP 27-1

Retrieve the instrument panel assembly.



STEP 27-2

Turn the panel over and install the right air vent (27B) with an FP01 screw, as shown.



STEP 27-3

Fix the left air vent (27A) to the other side of the panel with two FP01 screws.


STEP 27-4

Retrieve the floor assembly from Stage 23.





STEP 27-5

Insert the end of the gear lever (27C) into the indicated hole in the floor. Insert the pins along the bottom into the corresponding holes in the floor.

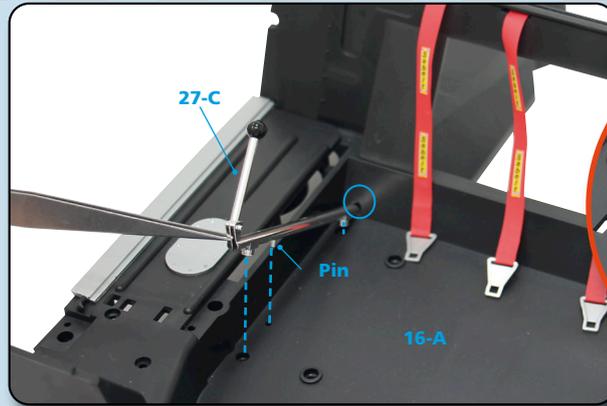

STEP 27-6

Mount the gear lever plate (27D) over the lever, as shown.

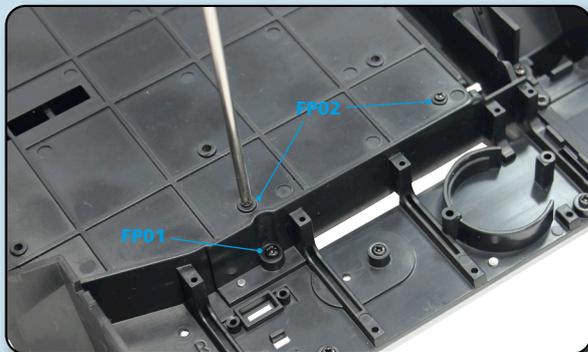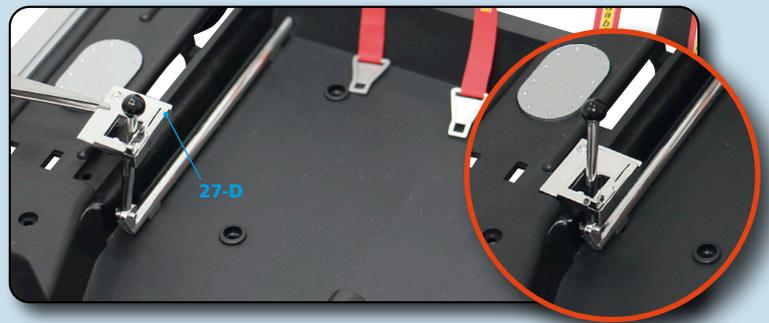

STEP 27-7

Turn the assembly over and secure the plate with an FP01 screw. Then fix the lever to the floor with two FP02 screws.



STEP 27-8

Retrieve the previously assembled seats.




STEP 27-9


Fit the seats into the centre of the floor, as shown, inserting the posts into the corresponding holes.

STEP 27-10

Turn the floor over and secure the seats with four FP02 screws.

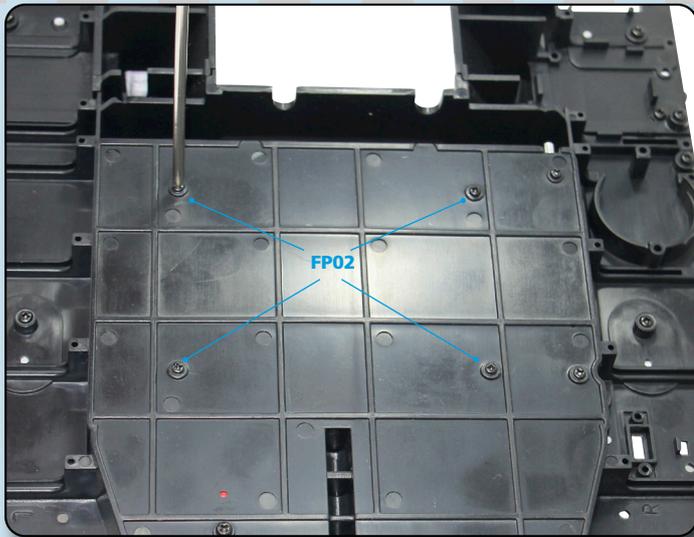

STAGE COMPLETE

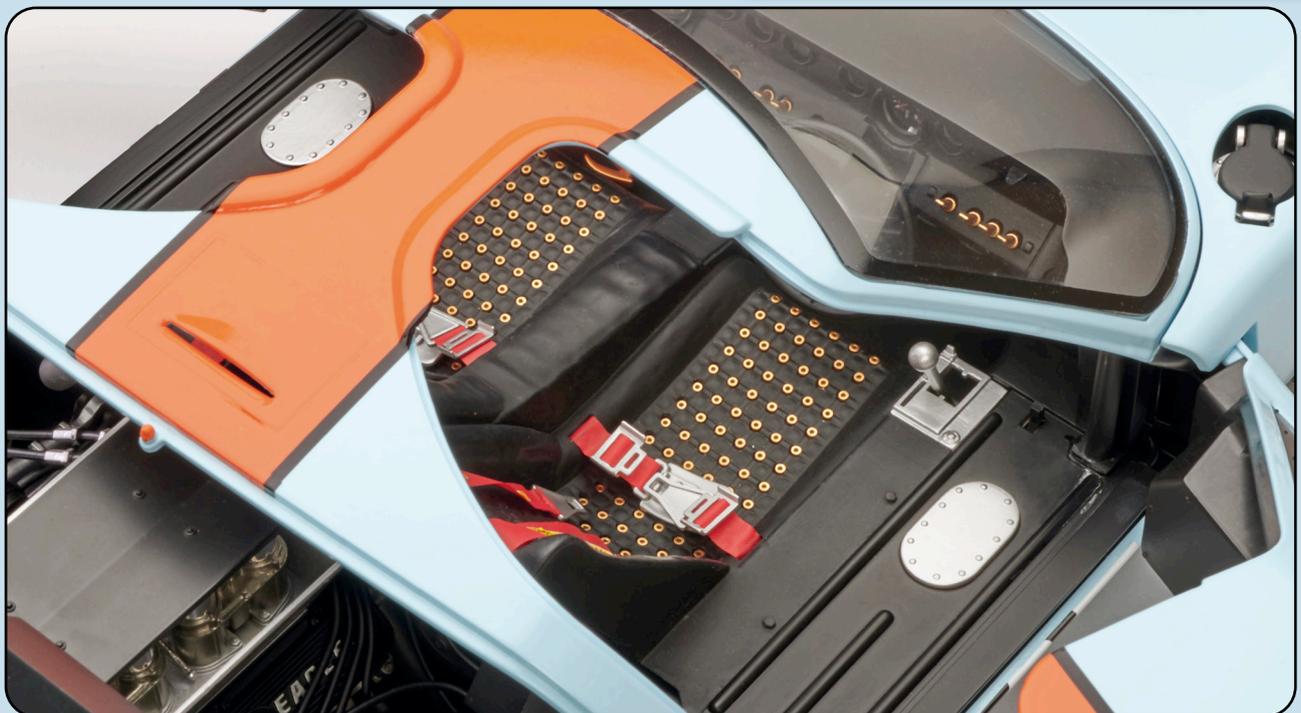

Stage 28: Pedals



YOUR PARTS

28-A Clutch and brake pedals

28-B Accelerator pedal

28-C Pedal rods

28-D Switch plate


28-E Cable 01


28-F Cable 02

28-G FP01 screw 2.3 x 4mm

28-H FP02 screw 1.8 x 4mm

28-I FP05 screw 1.2 x 3mm


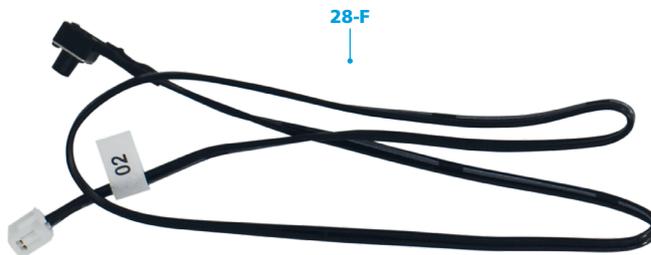


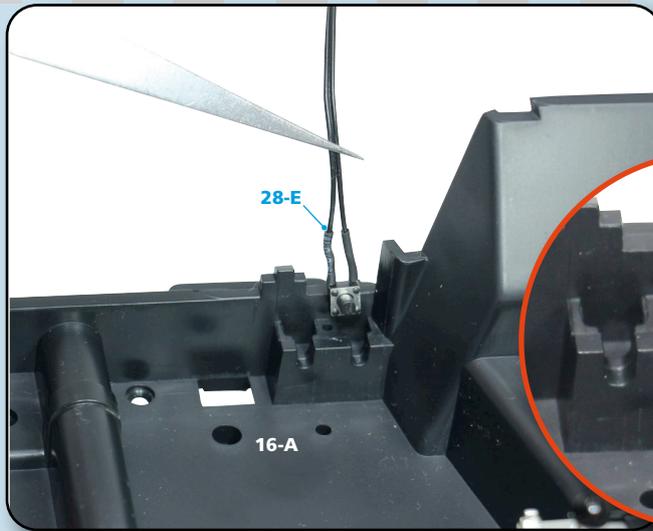

Step 28-1


Insert cable 01 (28E) into the right recess in the floor.


Step 28-2
Place cable 02 (28F) in the recess next to it.

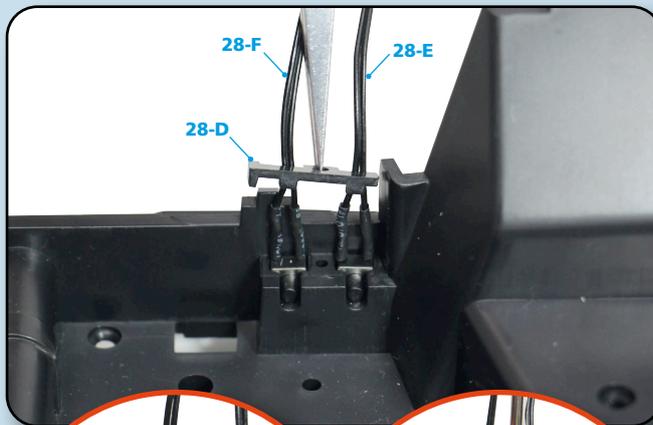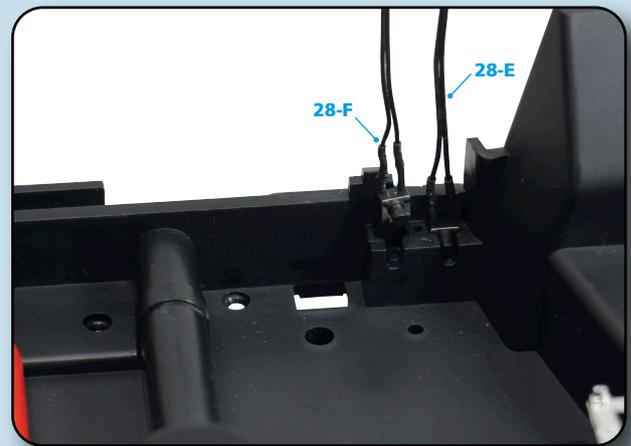

Step 28-3

Place the switch plate (28D) over both switches, as shown. Secure the plate with an FP02 screw.


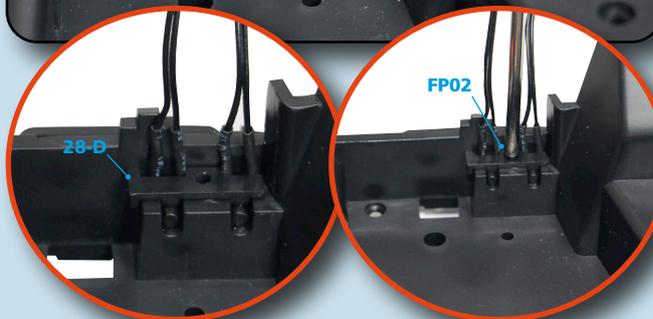


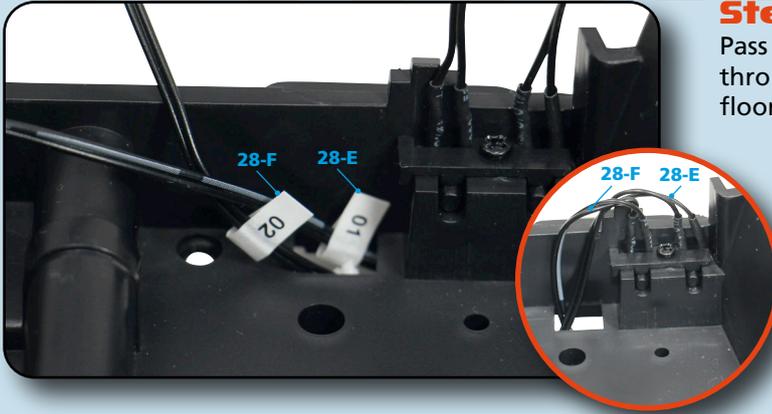

Step 28-4


Pass cables 01 (28E) and 02 (28F) through the rectangular opening in the floor to the left of the switch housing.

Step 28-5
Fit the pedal rods (28C) into place on the accelerator pedal (28B). Secure from the underside with an FP05 screw.

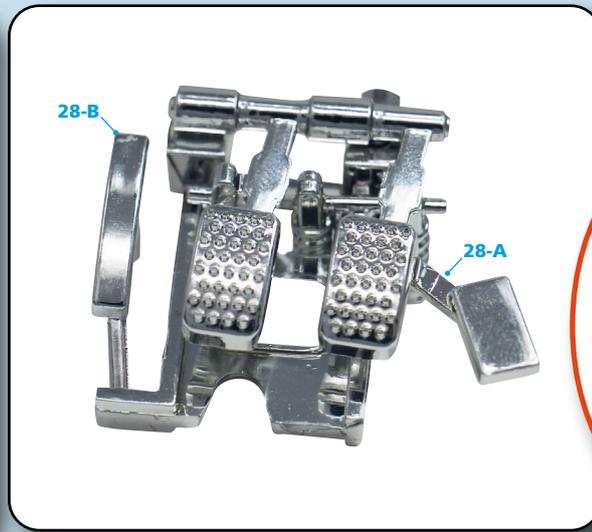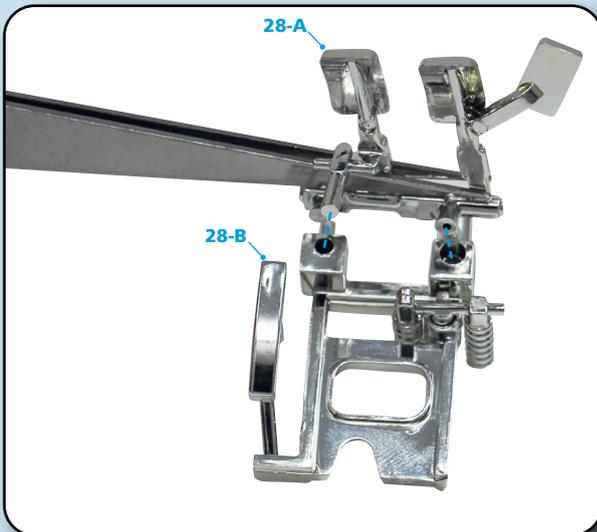

Step 28-6


Insert the clutch and brake pedals (28A) into the corresponding holes in the accelerator pedal. Turn the assembly over and secure the parts with an FP05 screw.

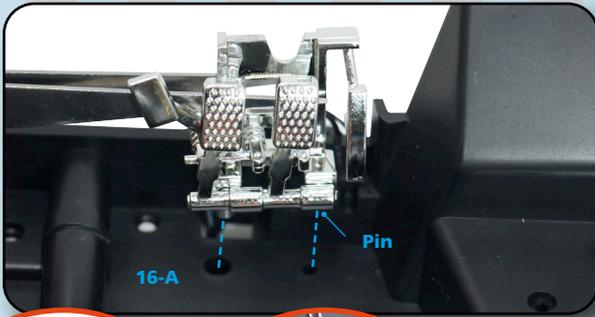

Step 28-7

Take the pedal assembly and insert it into the two indicated holes in the floor. Secure it from underneath with an FP01 screw.

**STAGE
COMPLETE**

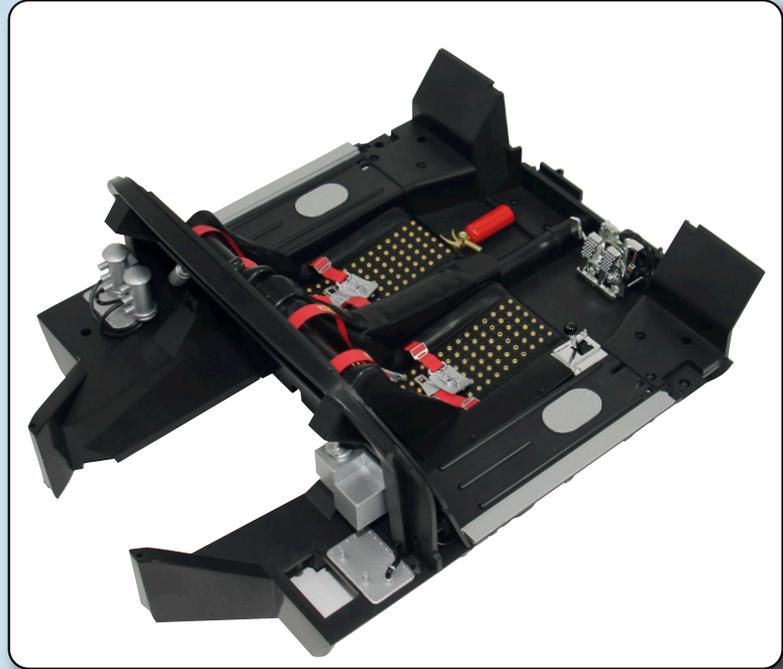


Stage 29: Steering wheel and column



YOUR PARTS


- 29-A Steering wheel
- 29-B Steering wheel cover
- 29-C Steering column
- 29-D Steering column guide
- 29-E Steering column pinion
- 29-F FD04 screw 1.8 x 3.5mm
- 29-G FP01 screw 2.3 x 4mm

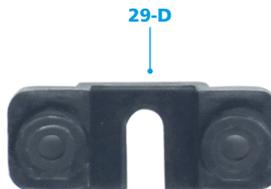



STEP 29-1

Insert the steering column (29-C) into the pinion (29-E). The two parts can only fit together in one orientation.

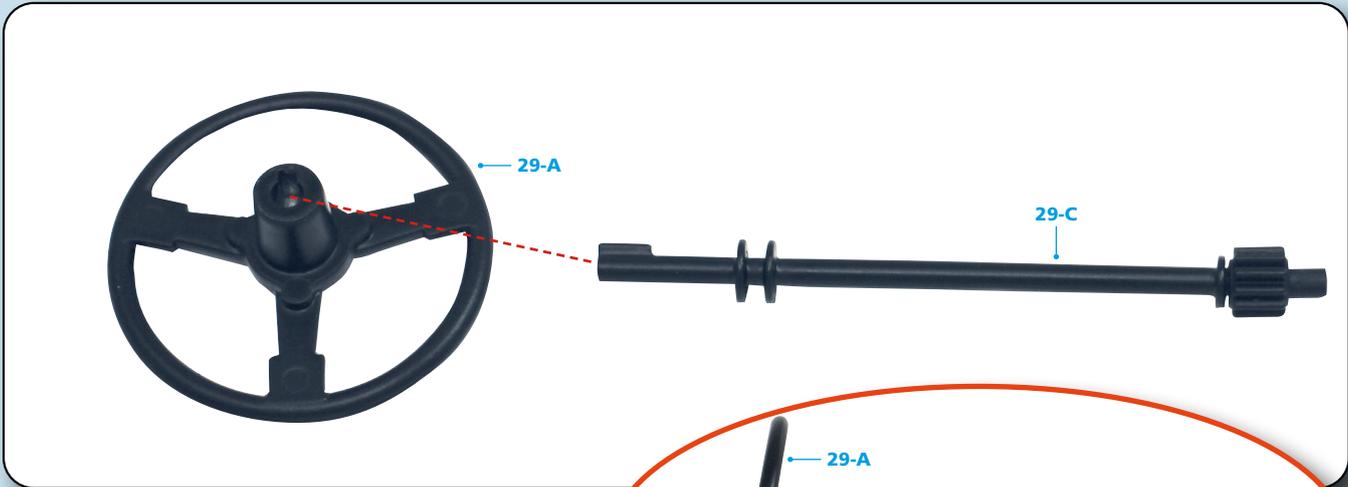

STEP 29-2

Press the column into the back of the steering wheel (29-A).



STEP 29-3

Secure the wheel (29-A) to the column (29-C) with an FD04 screw.


STEP 29-4

Place the wheel cover (29-B) into the centre of the steering wheel, as shown.



STEP 29-5

Retrieve the instrument panel from Stage 27. Turn the assembly over and engage the ringed part of the steering column with the instrument panel, as shown.

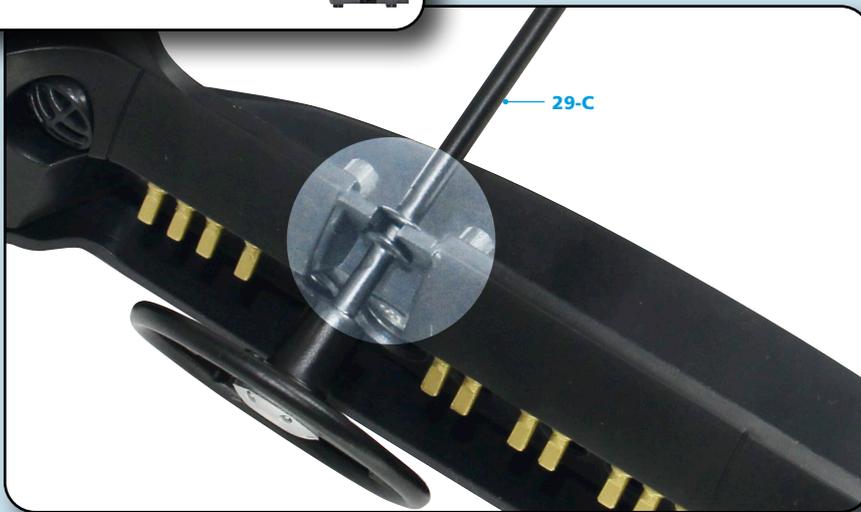

STEP 29-6

Then mount the steering column guide (29D) over the column and onto the instrument panel.




STEP 29-7

Secure the guide with two FP01 screws.



STAGE COMPLETE

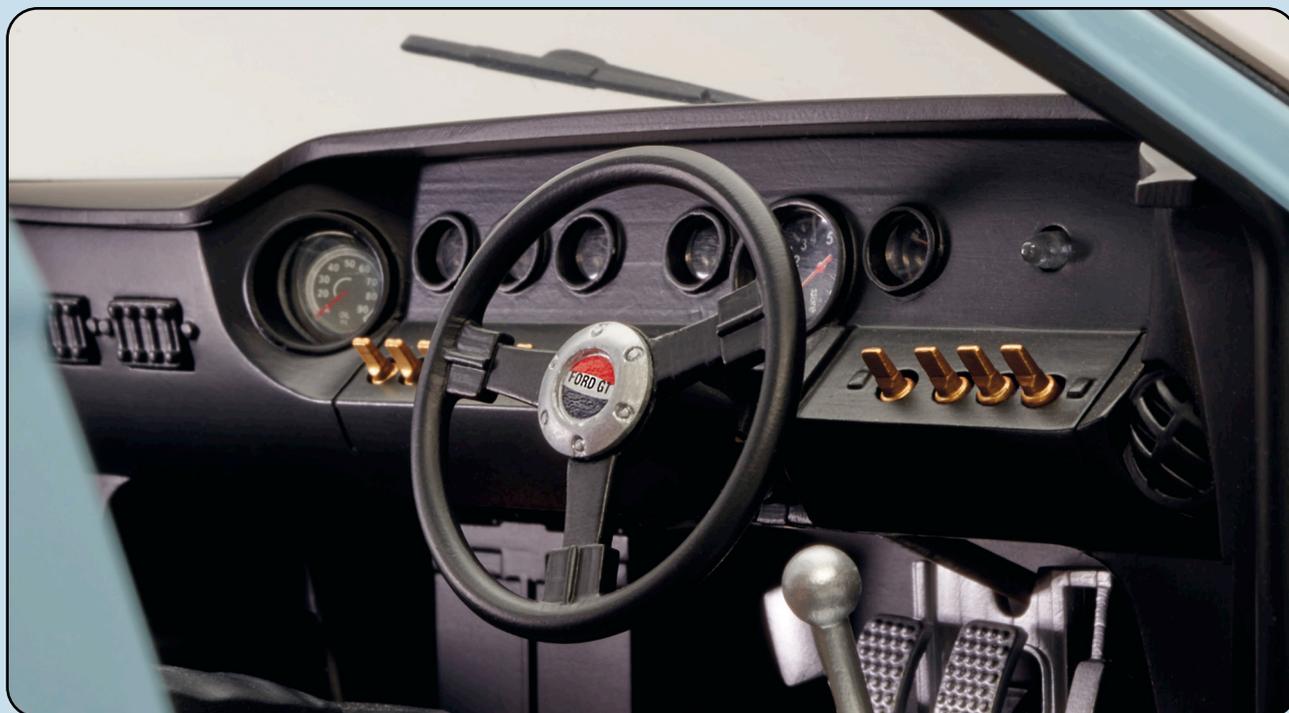

Stage 30: Steering rack




YOUR PARTS

30-A Battery box


30-B Steering rack

30-C Steering support

30-D FP01 screw 2.3 x 4mm

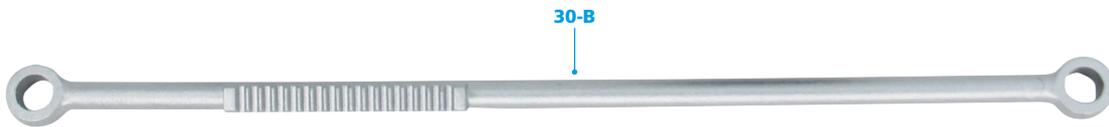


FP01

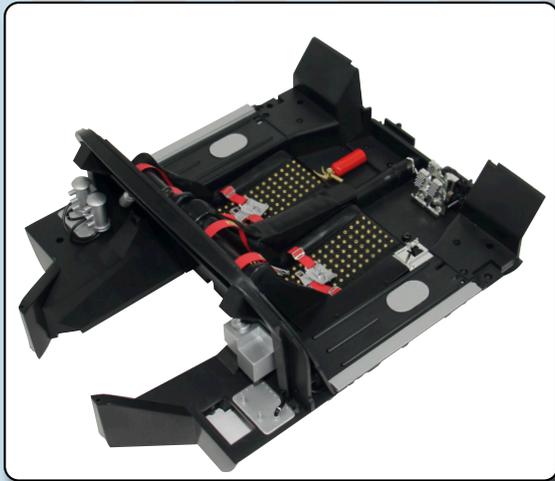


STEP 30-1

Recover the interior assembly.

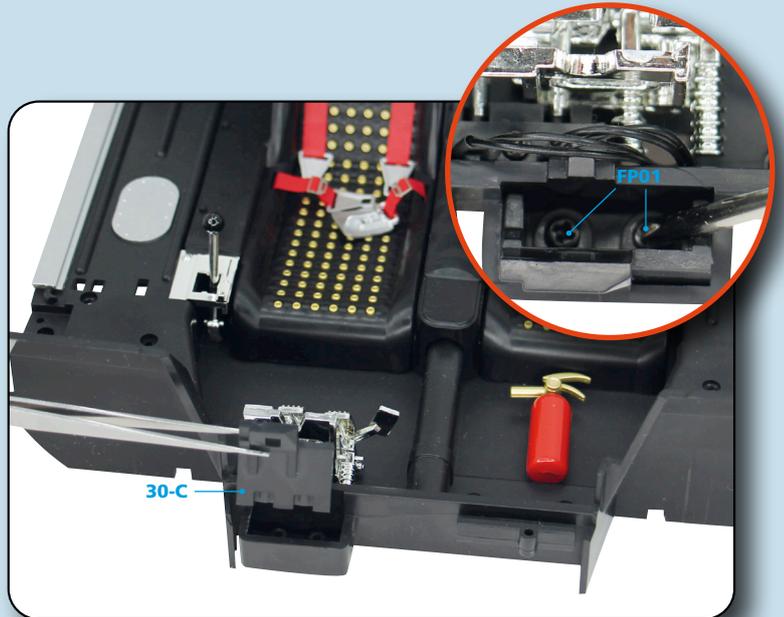

STEP 30-2

Install the steering support in front of the pedals. Secure it with two FP01 screws.

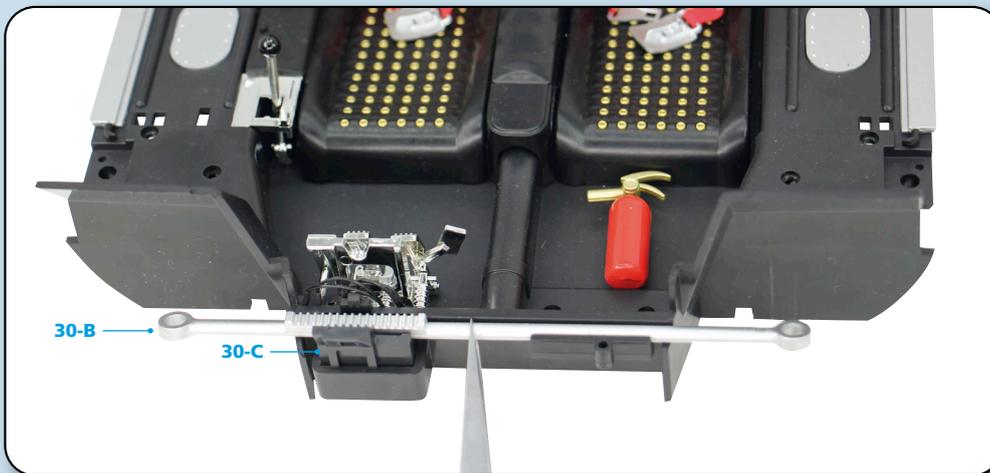


STEP 30-3

Place the toothed section of the steering rack (30-B) in the support, as shown.

STEP 30-4



Install the battery box (30-A) on the other side of the floor, over the steering rack. Fix the top of the box in place with an FP01 screw. Then secure from the underside with two more FP01 screws.

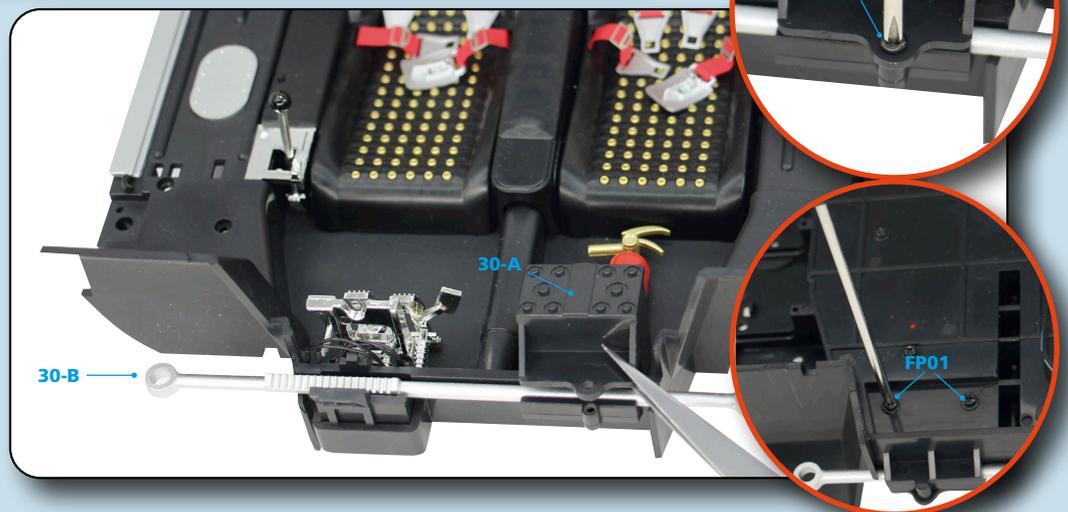

STEP BY STEP

STEP 30-5

Retrieve the instrument panel.

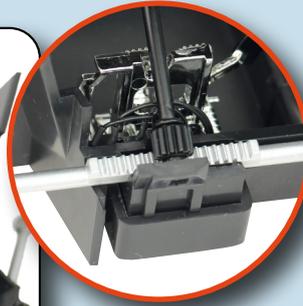
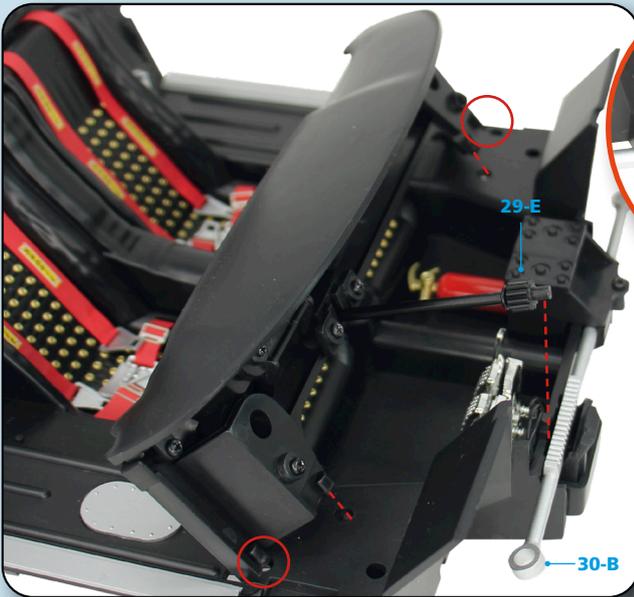


STEP 30-6

Place the instrument panel into the front of the floor, the posts entering the corresponding holes. The steering column pinion should rest in the steering rack.

STEP 30-7

Once the pinion is engaged with the rack, check that all the other mounting points are correctly positioned. Then, turn the assembly over and, secure the instrument panel with four FP01 screws.

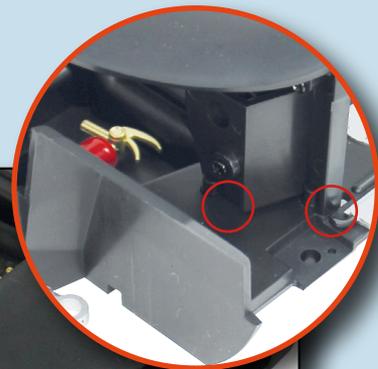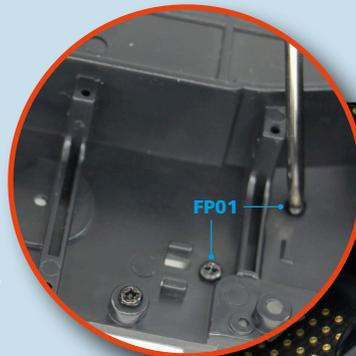

**STAGE
COMPLETE**

